

- of existing curb on job site matches dimensions of existing curb on this drawing.
- 3) Before new HVAC unit is set in place inspect structural stability of existing curb and building's roof load capability. Reinforce if required.
- 4) All curb adapters will increase the system's external static pressure and must be included when calculating unit requirements.
- 5) Follow all local and state laws when installing curb adapters.

Features

- 1) Fully assembled curb adaptor. Adaptor pans, if included, are shipped loose and field assembly is required.
- 2) Includes internal transitions.
- 3) Internally insulated with 1" 1.5 lb. insulation. Gasketing package provided

